

# PSF Conference Kit

## Setup Instructions



### IMPORTANT:

When shipping the trolley bag by postal delivery service, please make sure that you use the original shipping material.

When shipping the trolley bag by plane as baggage, please wrap the grid frame in an old cloth or other protective material as extra precaution against damage.

The included lamps have 220V light bulbs and use EU sockets. You may have to replace them with 110V ones and find an appropriate socket adapter or new power cable to use them.

Thanks,  
Python Software Foundation

# Setup and dismantling instructions




1. Setup the support grid by placing upright on the ground and carefully pulling the grid contraction to full size on the corner sides; one of the sides has small dark bumpers - that's the bottom side of the display



2. Lock the red connectors using the levers on each of them; you can open them by pushing the lever and pulling them apart again



3. Attach the magnets on the side parts of the display to each other

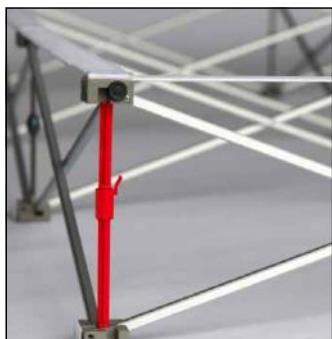

4. Place the grid on the ground; make sure the white ribbons face upright - that's where the display cloth will get attached



5. Starting from the lower right corner, place the display cloth on the adhesive ribbons. Note that the display cloth will go around the sides and attach on the rear of the display as well. When detaching the cloth, please be extremely careful not to rip apart the cloth near the adhesive connector ribbons.



6. Turn the display upright (on the small dark bumpers) and attach the display cloth to the back sides, pulling it straight.

7. This is how the display should look like from the back.

Note: Wind can easily make the display fall, so you may have to put some additional weights on the lower parts of the construction or use strings to fasten it.

8. Finally, and optionally, attach the lamps to the upper parts of the grid frame.

9. The slip covers are designed for round bistro tables with a diameter of 80cm. You can also pull them over tables of other sizes and then fix the bottom part of the cloth under the table stands with tape.

## Kit contents



1x trolley sports bag (38x35x90cm)  
1x grid frame  
2x lamps in separate carry bag  
(lamps are 220V and have an EU socket)  
1x display cloth  
2x slip covers for bistro tables  
1x adhesive ribbon repair set

Dismantling should happen in the reverse order of the setup: detach the lamps, carefully detach the display cloth and fold it, detach the magnets, open the red connectors, push the grid back together again from the corner sides, wrap everything up again and store the parts in the trolley.